ITM. / ART. 1806211

Sanctuary Reserve

SECURITY SAFE | INSTRUCTION MANUAL

안전 금고 | 사용 설명서

SA-PLAT-2-DX

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Please read this information and follow all safety rules carefully before operating your security safe. Failure to do so will void your warranty.

중요, 잘 보관하였다가 추후에 참고하십시오: 주의 깊게 읽으십시오.

금고를 사용하기 전에 이 정보를 읽고 모든 안전 규칙을
주의 깊게 따르십시오. 그렇지 않으면 보증이 무효화됩니다..

ATTENTION: TWO PERSON LIFT

주의: 두 사람이 함께 들어올려야 합니다.

022025

TABLE OF CONTENTS

IMPORTANT INFORMATION 2
1. *REGISTRATION* 3
2. *UNDERSTANDING YOUR SAFE* 4
3. *INITIAL ENTRY* 5
4. *LOCK FACE SECURITY CODE SETUP* 7
5. *LOCKED OUT OF YOUR SAFE* 8
6. *INTERNAL LIGHTING* 9
7. *LOW BATTERY WARNING* 9
8. *LOCKOUT MODE / TAMPER PROTECTION* 9
9. *SILENT ENTRY MODE* 10
10. *PROPER PLACEMENT AND MOVING OF SAFE* 10
11. *KEEPING YOUR SAFE DRY.* 10
12. *SECURING YOUR SAFE* 11
13. *SHELF CLIPS AND BUMPERS* 12
14. *LOADING YOUR SAFE* 12
15. *HINGES AND INTERNAL MECHANISMS* 12
LIFETIME WARRANTY 13

목차

중요 정보 14
1. *등록* 15
2. *금고 부위별 명칭* 16
3. *제품 외부 조립* 17
4. *잠금 문자판 보안 코드 설정* 19
5. *금고 보안 코드를 잊어버린 경우* 20
6. *내부 조명* 21
7. *배터리 부족 경고* 21
8. *잠금 모드/조작 표시기 보호* 21
9. *무음 입력 모드* 22
10. *금고를 적절한 곳에 배치하기* 22
11. *금고를 건조하게 유지하기* 22
12. *금고 고정하기* 23
13. *선반 클립에 범퍼 부착하기* 24
14. *금고에 물건 채우기* 24
15. *경첩 및 내부 잠금 장치* 24
평생 보증 25

DISCLAIMER - READ BEFORE

NOTE: Waterproof safes inherently take more force to close than traditional safes. The water seal must be compressed to ensure the safe is watertight. The safe will become easier to close over time as the seal sets.

PLEASE READ THIS INFORMATION CAREFULLY BEFORE OPERATING YOUR SANCTUARY SAFE.

DO NOT LOCK THIS MANUAL OR THE OVERRIDE KEYS IN YOUR SAFE.

- Thank you for choosing a Sanctuary safe to protect your valuables. We are committed to securing, organizing and protecting your most important documents, valuables and keepsakes.
- If you experience problems or challenges with your safe, please contact us. Many issues can be quickly resolved without the product being returned.

Contact Customer Service at cs@saproducts.com or (888) 792-4264 Hours of Operation: Monday - Friday, 9am - 5pm (Central Standard Time) Language Options: English, Spanish or French

SAFETY

- Be sure to keep override keys stored in a secure place away from unauthorized users

FIREARM STORAGE

- If you choose to utilize this safe to store a firearm always follow proper firearm storage and local laws.
- SA Consumer Products strongly recommends that you do not store loaded firearms.
- Always follow the firearm safety rules set out by the firearm's manufacturer.
- A Sanctuary safe or any other firearm storage device cannot take the place of other safety procedures including advising children of the dangers of firearms.
- SA Consumer Products and its distributors of Sanctuary safes do not recommend, suggest, advise, promote, or otherwise condone the ownership or use of firearms. We believe the decision to own or use a firearm is a serious decision that should only be made by an adult who has carefully considered the risks and benefits of such a decision.

1. REGISTRATION

Register your safe at www.saproducts.com

By registering your Sanctuary safe we will be able to expedite and address any problems or challenges you may have which would otherwise require a notary letter and proof of payment.

REGISTRATION INFORMATION

The information you record onto this page will be required in the event you cannot access the contents of your Sanctuary safe. Please fill out all the required information below and retain for your records and safe keeping.

PLEASE HAVE THIS INFORMATION READY FOR TECHNICAL ASSISTANCE:

Contact Customer Service at cs@saproducts.com or (888) 792-4264 Hours of Operation: Monday - Friday, 9am - 5pm (Central Standard Time) Language Options: English, Spanish or French

PURCHASE DATE:

PURCHASE PRICE (BEFORE TAX):

MODEL NUMBER:

SERIAL NUMBER:

RETAILER NAME:

KEY NUMBER (IF APPLICABLE):

2. UNDERSTANDING YOUR SAFE

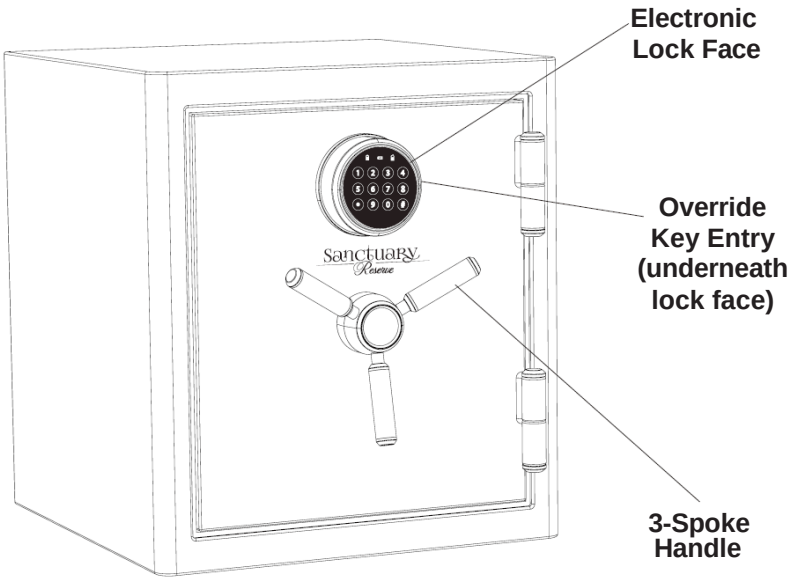

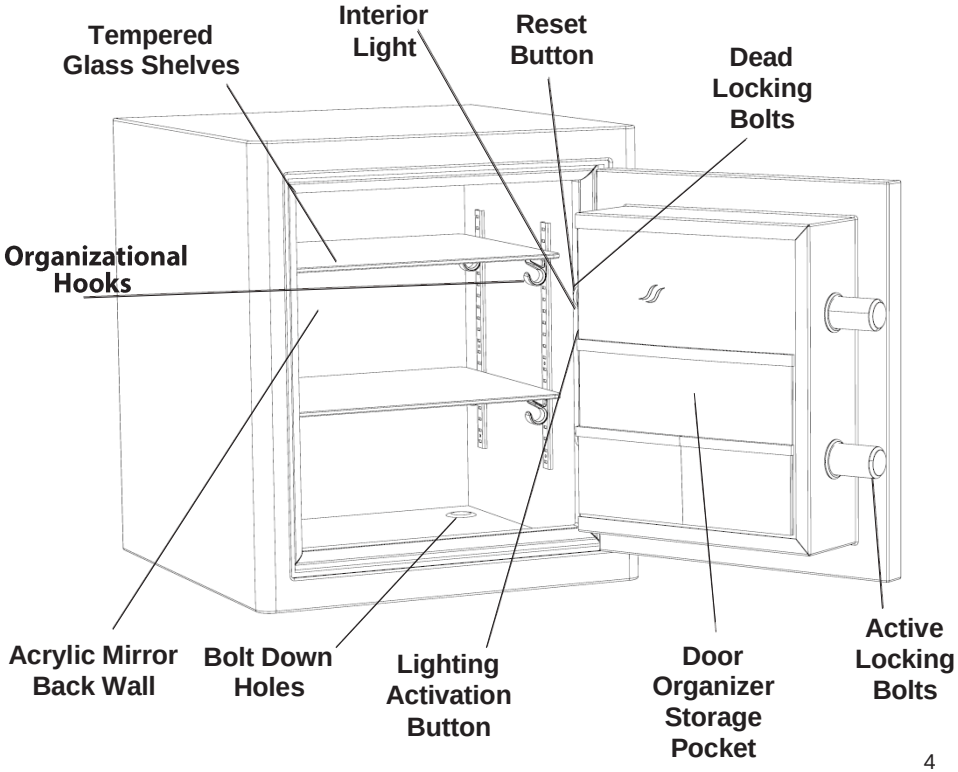

3. INITIAL ENTRY

1. Locate the override keys and single spoke inside the initial entry box.

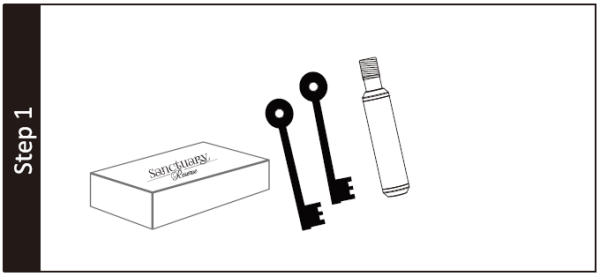

2. Install the single spoke by inserting into one of the threaded openings and twisting clockwise until you feel the spoke fully lock into place.

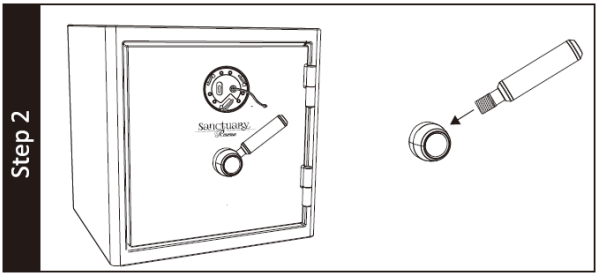

3. Insert and turn the override key clockwise to unlock.

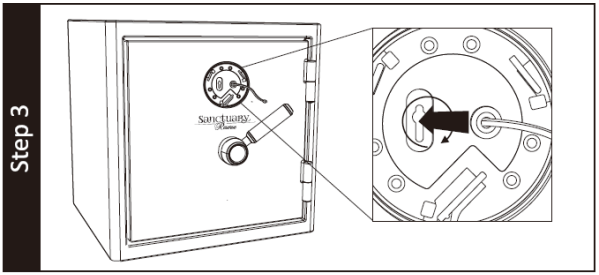

4. Turn the handle clockwise to unlock the safe door. Open the safe door, then turn the handle back to it's starting position so the locking bolts are extended. Remove the override key and set aside.

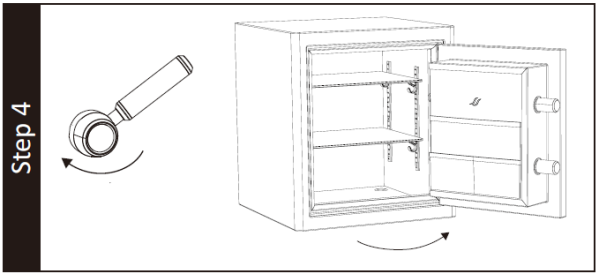

5. Remove the lock face from the welcome box located inside the safe.

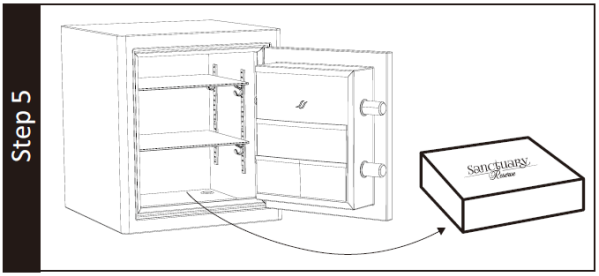

3. INITIAL ENTRY (Continued)

6. Locate the 1x9V battery. Install into the battery compartment on the back of the lock face in the proper orientation. The touch pad will beep when batteries are successfully installed.

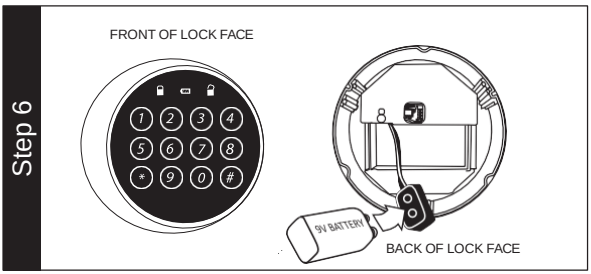

WARNING: The batteries must be inserted with the correct polarity. Exhausted batteries must be removed from the product and discarded safely. Do not mix old and new batteries. Do not mix alkaline or standard (carbon – zinc) batteries. Do not use recharge- able (nickel – cadmium) batteries.

7. Plug the electronic lock cable into the back of the lock face. The connector on the cable will only fit into the connector in the lock face in one way.

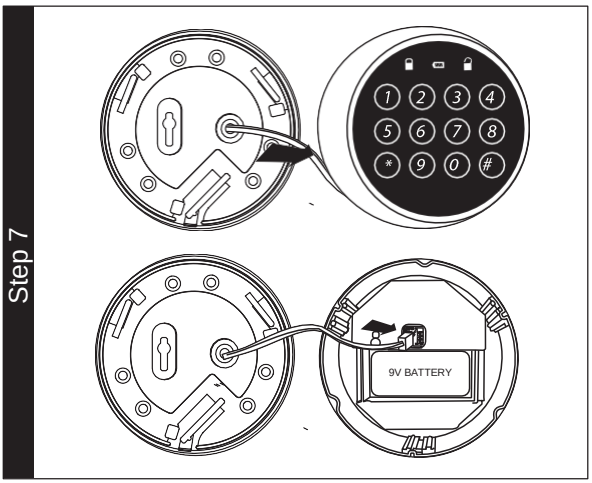

8. Align the lock face to the backer plate, with the lock face slightly rotated to the left. Turn clockwise until you feel the lock face click into place. Once the lock face has been installed, locate the remaining spokes inside of the safe. Insert each individual spoke into a threaded opening and turn clockwise to install.

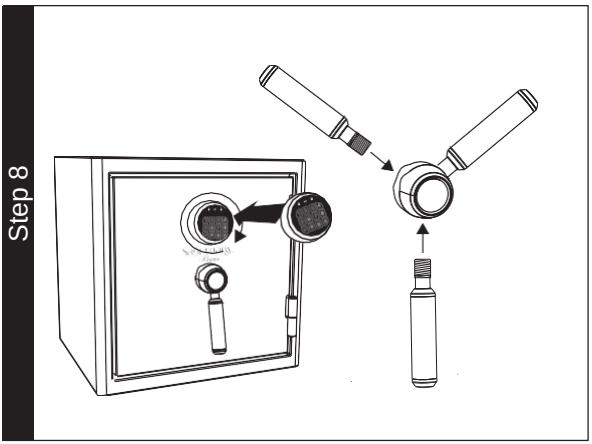

4. LOCK FACE SECURITY CODE SETUP

Important: It is necessary to reprogram your safe with a new security code you have personally selected to provide maximum household security. Be careful in choosing your new security code, you'll want to be sure that you can operate the unit quickly without making an error.

1. Tap the keypad to "wake up" the lockface. Insert the factory preset code of (1-5-9-#). This will unlock the safe in a DEFAULT MODE. (DO NOT use this code while securing items in your safe)

   ***Note: if your safe is still open, you can skip this step and go to #2.**

2. Inside of the safe door, locate the small cap. Unscrew and remove the cap, you will now see the reset button. Press and release the reset button. You will hear 2 beeps. The yellow (left) light on the lock face will illuminate indicating you are now in programming mode.

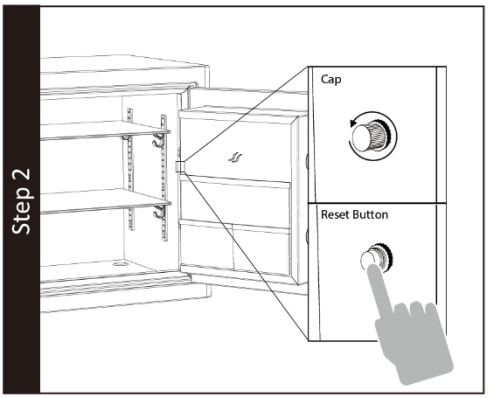

3. While the yellow (left LED) is illuminated, enter your new 3 to 8-digit security code followed by [*] lock face will beep twice indicating successful programming.

4. LOCK FACE SECURITY CODE SETUP (Continued)

4. While the safe door is still open, confirm your newly entered security code. Tap to “wake up” the keypad. Now enter your new 3-8 digit code followed by (#). If successful you will hear 2 beeps and the green light will illuminate, allowing you to open the safe.

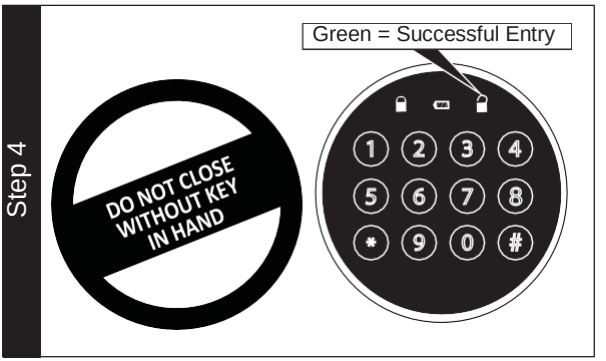

Note: Do not shut the safe door until you have confirmed your new security code at least 3 times, ensure your code has been saved and you can open the door successfully. If the code fails, the yellow (left) light will flash and beep. Repeat the steps above until successful.

WARNING: If the incorrect security code is entered 3 times you will have an automatic lockout for 30 seconds before you can enter your code again. If 3 additional failed attempts are made, the lock face will lockout for 5 minutes. Leave batteries in to go through lockout cycle. If batteries are removed the timer will restart zero.

5. LOCKED OUT OF YOUR SAFE

In the event you have forgotten the security code your primary action will be to use your backup keys in order to gain access to your safe and follow the Lock Face Security Code Setup instructions.

If you have lost your backup keys, you will need to contact customer service at the number below. Proof of purchase is required to obtain keys.

Contact Customer Service at cs@saproducts.com or (888) 792-4264 Hours of Operation: Monday - Friday, 9am - 5pm (Central Standard Time) Language Options: English, Spanish or French

6. INTERNAL LIGHTING

When the safe door is opened, internal lighting activates for 30 seconds.

If you need to activate your light longer, you can press the green light activation button on the inner door panel. This will activate the internal lighting for an additional 30 seconds each time it is pressed.

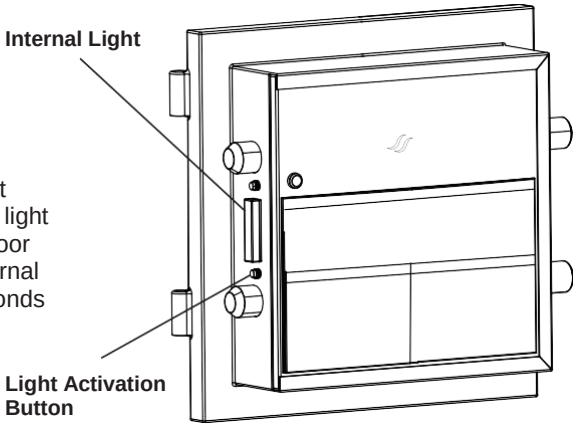

7. LOW BATTERY WARNING

Red & Green = Low Battery

This safe is equipped to alert you of Low Battery Mode. This Low Battery Warning is initiated immediately after a successful code entry. The touch pad will illuminate both the red low battery LED and green unlock LED for 3 seconds. It is highly advised to immediately replace the safe's batteries to avoid being locked out of your safe.

8. LOCKOUT MODE / TAMPER PROTECTION

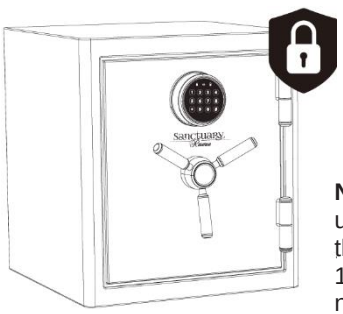

1. Three consecutive rejected security code entries puts the safe in “Basic Lockout” mode. The touch pad is deactivated for 30 seconds.
2. Six consecutive rejected security code entries results in “Severe Lockout” mode. The touch pad is deactivated for 5 minutes.

Note: During lockout mode, the yellow lock LED will light up once every 10 seconds. When lockout mode has ended, the green unlock LED will flash 1 time and you will hear 1 beep to signify the lockout mode has ended. You will now have access to your touch pad.

3. After the safe enters basic or severe lockout mode, the tamper indicator will trigger to warn you that someone has unsuccessfully attempted to gain access to your safe. This tamper indicator will signal immediately after the next successful code is entered. The yellow lock LED will flash 3 times and in addition to a 3 second long beep.

9. SILENT ENTRY MODE

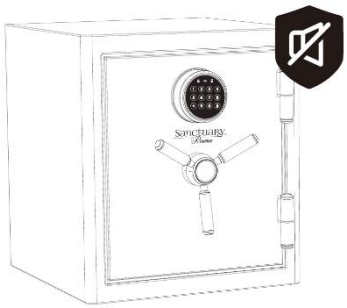

By activating the silent entry mode, the safe will no longer make audible sounds.

Tap the touch pad to “wake up” and activate the lock face.
To turn on silent entry mode, press and hold the (*) for 3 seconds and the yellow LED flashes 2 times indicating the safe is now in silent entry mode.

To turn the sound back on, press and hold the (*) for 3 seconds and the yellow LED flashes 2 times and will beep indicating you are no longer in silent entry mode.

10. PROPER PLACEMENT AND MOVING OF SAFE

1. To maximize burglary protection and stability, securing the safe to the floor or wall is recommended.
2. SA Consumer Products recommends that you store your safe in a closet, office, basement, bedroom or any other location that is convenient for you but out of direct line of sight from prying eyes.
3. Always ensure the safe is in an isolated and dry area. Never place the safe in direct contact with a wet floor. When installing your safe on a concrete floor, use of a moisture/protective barrier is highly recommended. Failure to do so, or exposing the safe to chemicals or other adverse environments, may void the warranty.

11. KEEPING YOUR SAFE DRY

We recommend placing a moisture/protective barrier between your safe and concrete floor to prevent any moisture, mildew and rust damage to the safe. Installing your safe in a place with climate control (heat in the winter and cooling in the summer) is highly recommended. In areas of high humidity or frequent temperature fluctuations (garages) it is recommend to take appropriate precautions to ward against moisture damage. We strongly encourage the use of an internal dehumidifier and/or desiccants to protect your contents from rust or mildew. Internal dehumidifiers should not be in direct contact with the side or back walls.

12. SECURING YOUR SAFE

WARNING: YOUR SAFE IS DESIGNED TO SUPPORT ITSELF WHEN THE DOOR IS OPENED. HOWEVER, CAUTION SHOULD BE USED TO AVOID TIPPING. WHILE SECURING YOUR SAFE BE SURE TO HAVE A SECOND PERSON HOLD AND STABILIZE THE SAFE TO KEEP IT FROM TIPPING, CAUSING INJURY, AND/OR DAMAGE TO THE SAFE AND SURROUNDING STRUCTURES. FAILURE TO DO SO WILL COMPROMISE THE SAFETY, SECURITY, AND WARRANTY OF THE SAFE.

TOOLS NEEDED TO BOLT SAFE TO A CONCRETE SURFACE (NOT INCLUDED)

- DRILL / HAMMER DRILL
- DRILL BIT – 7/16" (for installing into concrete with provided hardware)
- WRENCH – 11/16" (17MM) SOCKET
- HAMMER

SAFETY GLASSES
- GLOVES
- OTHER SAFETY EQUIPMENT AS NEEDED

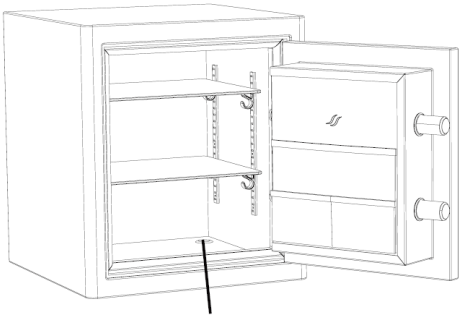

FLOOR BOLT DOWN HOLES

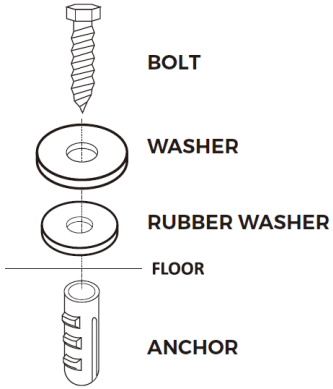

1. Use the hardware provided or consult your hardware retailer for fastening hardware for your particular mounting surface.
2. Open your safe door and locate and remove the four black caps on the safe floor. This will provide access to the factory drilled bolt down holes.
3. To secure your safe to the floor it will first be necessary to drill pilot holes in the floor surface.
4. For the hardware provided (concrete floor installation) we recommend using a hammer drill and 7/16" concrete drill bit to drill the four corresponding holes in the concrete floor.
5. Insert and drive the plastic anchoring plugs into the pilot holes. You may need to use a hammer to fully insert the plugs into the pilot holes.
6. Secure the safe, by threading all 4 anchor bolts through the factory drilled bolt down holes in the bottom of the safe and ratcheting down tight.
   - Make sure the metal washer sits on top of the rubber washer. Tighten the bolt to compress the rubber washer between the safe and metal washer. Failure to do so will allow water to enter the safe in the event of a flood.
7. Replace the four black caps onto the floor of the safe.

13. SHELF CLIPS AND BUMPERS

NOTE: Before you apply the rubber bumper to the shelf clip, make sure the surface is clean and dry.

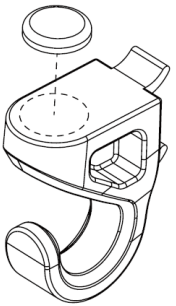

1. Tear off the self-adhesive backing. Do not touch the adhesive side, then apply it to the surface of the shelf clip.
2. Once in place, press down on the rubber bumper for 5 seconds so that it sticks tightly.

14. LOADING YOUR SAFE

1. Store documents or heat sensitive items in the bottom of the safe for greatest protection against fire damage.
2. Store ammunition separately from valuables.
3. Do not put anything in your safe that will put pressure against the door when it is closed.
4. As a good safety precaution store heavier items either on the floor of the safe, or away from the middle of the shelves.

15. HINGE AND INTERNAL MECHANISMS

The hinges and internal locking mechanism are permanently lubricated, thus needing no maintenance. Opening the door panel of your safe may void your warranty. Always consult our customer service experts prior to doing so.

NOTE: Waterproof safes inherently take more force to close than traditional safes. The water seal must be compressed to ensure the safe is watertight. The safe will become easier to close over time as the seal sets.

LIFETIME WARRANTY

SA Consumer Products, Inc. will repair or replace, at their sole discretion, any Sanctuary Safe damaged by fire, forced entry, forced attack or natural flood for the lifetime of the original owner.

SA Consumer Products, Inc. will repair or replace, at their sole discretion, any Sanctuary Safe with defective parts, paint or lock for the lifetime or the original owner.

If SA Consumer Products, Inc. deems a replacement safe is to be sent, they will pay the freight costs to ship the replacement safe to the original owner.

This lifetime warranty is limited to the safe and expressly excludes any loss associated with the contents of the safe.

SA Consumer Products, Inc. reserves the right to receive full evidence of your misfortune, such as a police report and/or homeowners statement of coverage.

Proof of registration and copy of sales receipt must be on file at the time of claim. Visit our website at www.saproducts.com to register your safe.

Lifetime warranty only applies to the original owner of the safe.

SA Consumer Products, Inc. shall only be responsible and liable when the safe is used in compliance with the directions specified in your new Sanctuary Safe Owner's Manual.

Failing to secure your safe properly to the floor per instructions in the Users Manual will void the Warranty of the Safe.

SA Consumer Products, Inc. requires that specific guidelines be followed for repair. The safe will be repaired in-home if possible (to include parts and labor); however, if factory replacement is necessary (at SA Consumer Products, Inc.'s sole discretion), the replacement will be shipped freight prepaid, curbside delivery.

This warranty is inclusive and is in lieu of any and all other warranties, express or implied. Specifically excluded are the warranties of merchantability and fitness for a particular purpose.
This warranty is limited to the safe itself and/or its value and does not include consequential damages of any kind including, but not limited to, the contents in and of the safe.

면책 조항 - 안전한 설치를 위해 반드시 읽어 주세요

참고: 방수 처리된 금고는 본질적으로 기존의 금고보다 금고 문을 닫는 데 더 많은 힘이 필요합니다. 금고가 방수 상태를 유지하려면 워터 씰(water seal)을 압축해야 합니다. 씰이 굳고 시간이 지남에 따라 금고를 닫는 것이 더 쉬워집니다.

안전 금고를 사용하기 전에 이 정보를 주의 깊게 읽으십시오.
이 설명서 또는 금고에 있는 오버라이드 키를 잠그지 마십시오.

- **귀중품을 안전하게 보관할 수 있는 안전 금고 선택해 주셔서 감사합니다. 저희는 귀하의 가장 중요한 문서, 귀중품, 유품을 안전하게 보관, 정리, 보호하기 위해 최선을 다하고 있습니다.**
- **안전에 문제가 있거나 문제가 발생하면 저희에게 연락 부탁 드립니다. 제품을 반품하지 않고도 많은 문제를 신속하게 해결할 수 있습니다.**

고객 서비스 연락:
이메일: cs@saproducts.com
전화: +1 (888) 792-4264
영업시간: 월 ~ 금 오전 9 시~오후 5 시(중부 표준시)
언어 선택: 영어, 스페인어, 프랑스어

안전

- 무단 사용자의 접근이 불가능한 안전한 장소에 오버라이드 키를 보관하십시오.

화기 보관

- 이 금고를 총기 보관용으로 사용할 경우, 항상 총기 보관 및 현지 법률을 준수하십시오.
- SA Consumer Products 는 장전된 총기를 보관하지 말 것을 강력히 권장합니다.
- 항상 총기 제조업체가 정한 총기 안전 규칙을 따르십시오.
- 안전 금고 또는 기타 총기 보관 장치는 어린이들에게 총기의 위험성에 대해 알려주는 것을 포함한 다른 안전 절차들을 대신할 수 없습니다.
- SA Consumer Products 와 안전 금고 유통업체는 총기 소유 또는 사용을 권장, 제안, 조언, 홍보 또는 다른 방법으로 묵과하지 않습니다. 총기를 소유 또는 사용함으로써 발생하는 위험과 이점을 신중하게 고려한 성인에게만 그 권한이 주어져야 합니다.

1. 등록

www.saproducts.com 에서 금고를 등록하십시오.

안전 금고를 등록하시면, 공증서 및 지불 증명서가 필요할 수 있는 문제나 어려움을 신속하게 해결할 수 있습니다.

등록 정보

해당 페이지에 기록하는 정보는 안전 금고에 접근할 수 없는 경우에 필요합니다. 아래에 있는 모든 필수 정보를 기입하고 기록 및 안전한 보관을 위해 보관하십시오.

기술 지원이 필요할 때를 대비하여 아래 정보를 준비해 두십시오.

고객 서비스 연락:
이메일: cs@saproducts.com
전화: +1 (888) 792-4264
영업시간: 월 ~ 금 오전 9 시~오후 5 시(중부 표준시)
언어 선택: 영어, 스페인어, 프랑스어

구매 일자:

구매 가격(세금 별도):

모델 번호:

일련 번호:

소매업체명:

키 번호(해당되는 경우):

2. 금고 부위별 명칭

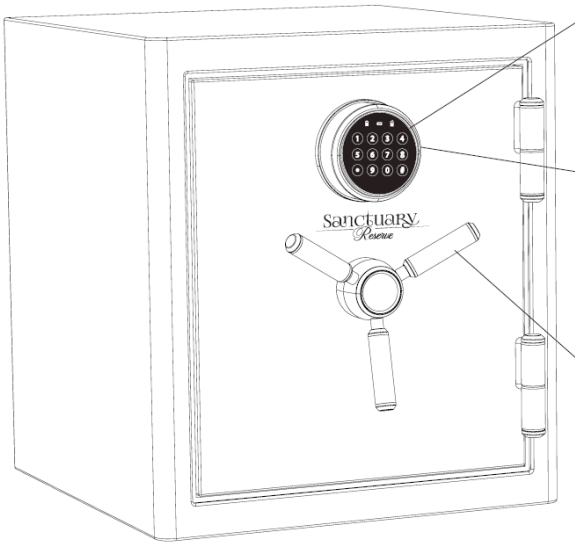
전자 잠금 회면
오버라이트 키
구멍(잠금 문자판
아래)
3 스포크 핸들

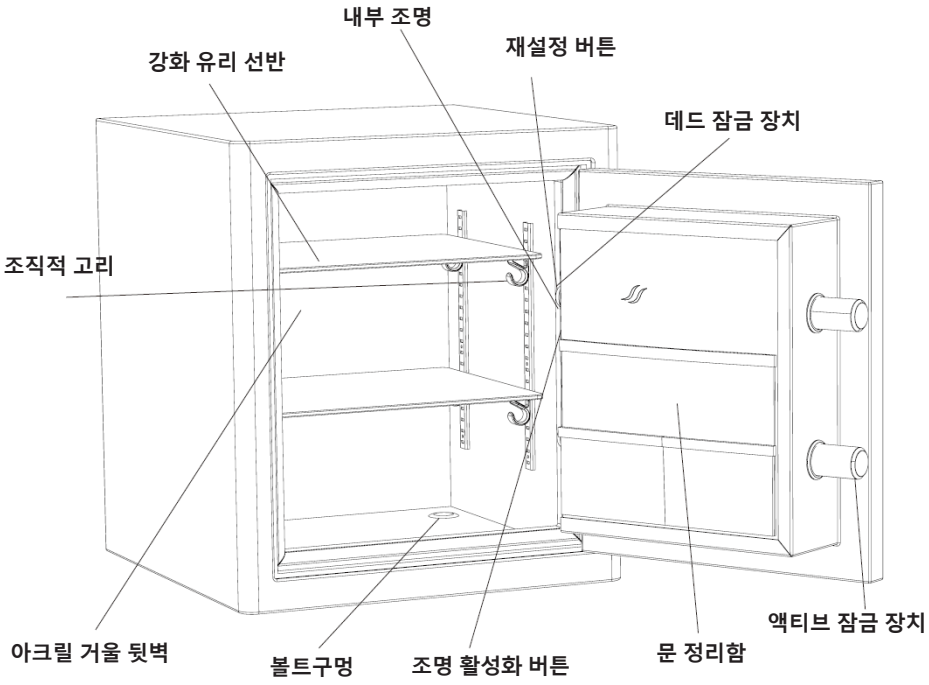
내부 조명
강화 유리 선반
재설정 버튼
데드 잠금 장치
조직적 고리
아크릴 거울 뒷벽
볼트구멍
조명 활성화 버튼
문 정리함
액티브 잠금 장치

3. 제품 외부 조립

1. 제품 조립 상자 안에서
오버라이드 키와 스포크
1개를 찾아 꺼냅니다.

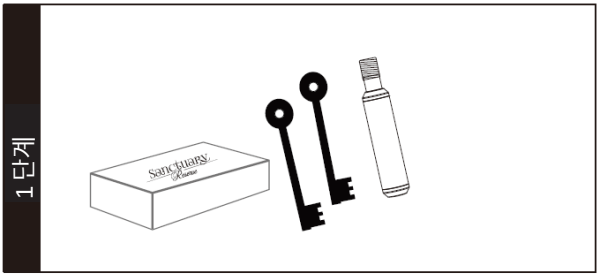

2. 나사 구멍 중 하나에 스포크를
삽입하고 스포크가 완전히
고정될 때까지 시계 방향으로
돌려 단단히 고정합니다.

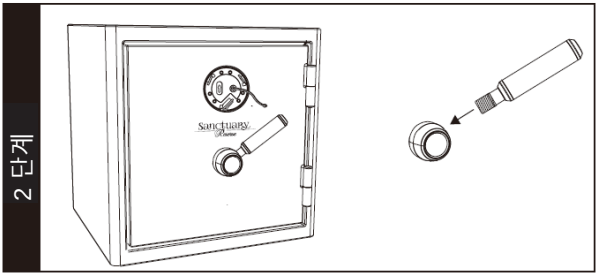

3. 오버라이드 키를 구멍에 넣고
시계 방향으로 돌려 잠금을
해제합니다.

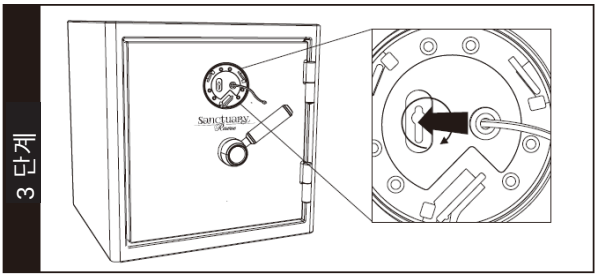

4. 핸들을 시계 방향으로 돌려
금고 문의 잠금을 해제합니다.
금고 문을 열고 핸들을 다시
시작 위치로 돌려 잠금
장치가 확장되도록 합니다.
오버라이드 키를 제거하고
옆에 둡니다.

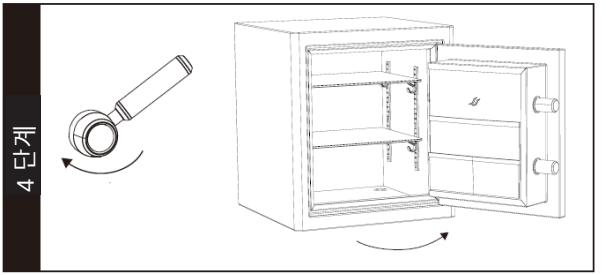

5. 금고 안에 있는 웰컴 상자에서
잠금 문자판을 찾아 꺼냅니다.

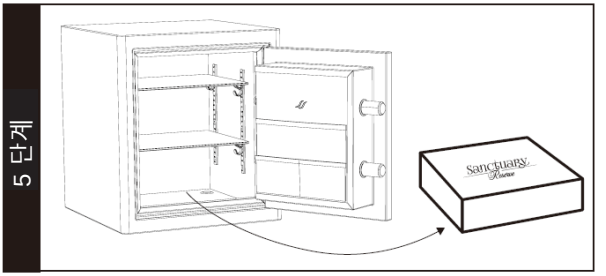

3. 제품 외부 조립 (계속)

5. 9V 배터리를 준비합니다. 잠금 문자판 뒷면의 배터리 칸에 올바른 방향으로 설치합니다. 배터리가 성공적으로 설치되면 터치패드에서 삐 소리가 납니다.

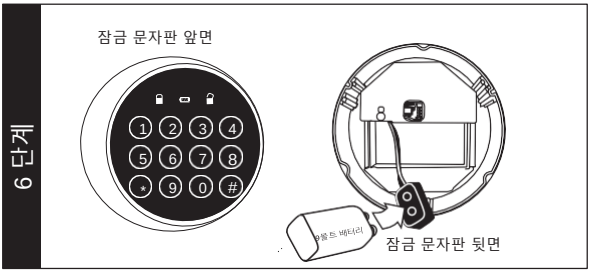

경고: 배터리는 극성에 맞게 삽입해야 합니다. 사용한 배터리는 제품과 분리하여 안전하게 폐기해야 합니다. 새 배터리와 사용한 배터리를 함께 사용하지 마십시오. 알칼리성 또는 표준 (탄소-아연) 배터리를 함께 사용하지 마십시오. 충전식 배터리 (니켈-카드뮴) 를 사용하지 마십시오.

7. 전자식 잠금 케이블을 잠금 문자판 뒷면에 연결합니다. 케이블 커넥터는 잠금 문자판 뒷면 커넥터에 한 방향으로만 맞습니다.

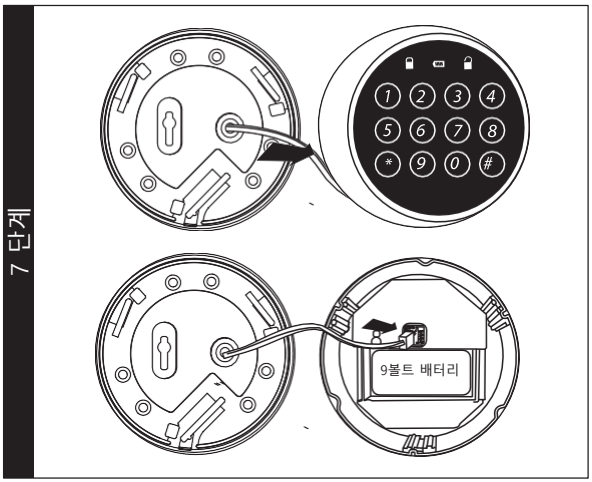

8. 잠금 문자판이 약간 왼쪽으로 향하게 하여 잠금 문자판을 지지판에 맞춰 정렬합니다. 잠금 문자판이 딸깍 소리를 내며 제자리에 고정될 때까지 시계 방향으로 돌립니다. 잠금 문자판이 설치되면, 금고 안에 남아 있는 스포크를 꺼냅니다. 스포크를 나사산이 있는 구멍에 삽입하고 시계 방향으로 돌려 설치합니다.

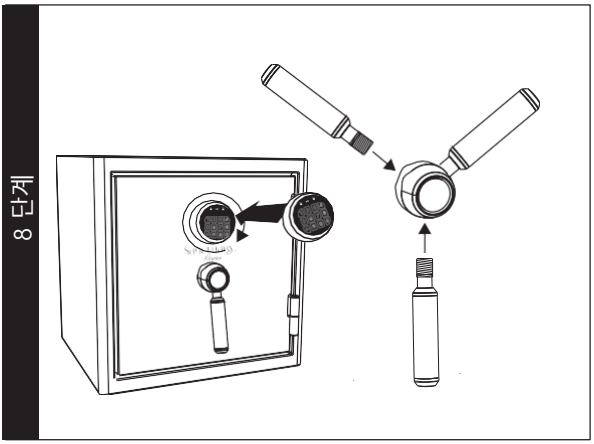

4. 잠금 문자판 보안 코드 설정

중요: 가정에서 최대한 안전하게 금고를 사용하려면 직접 선택한 새로운 보안 코드로 금고를 다시 프로그래밍해야 합니다. 새로운 보안 코드를 선택할 때는 실수 없이 금고를 신속하게 조작할 수 있는지 확인해야 합니다.

1. 키패드를 터치하여 잠금 문자판을 "활성화"합니다. 공장 출고 시 설정된 비밀번호 (1-5-9-#) 를 입력합니다. 그러면 기본 모드에서 잠금이 해제됩니다. (금고에 물건을 보관하는 동안에는 이 비밀번호를 사용하지 마십시오)
   *** 참고: 금고가 아직 열려 있는 경우, 이 단계를 건너뛰고 2번으로 넘어가도 됩니다.**

2. 금고 문 안쪽에 있는 작은 캡을 찾습니다. 캡을 돌려서 제거하면, 리셋 버튼이 보일 것입니다. 리셋 버튼을 눌렀다 떼십시오. 삐 소리가 두 번 들릴 것입니다. 잠금 문자판 앞부분에 있는 노란색 불빛 (왼쪽) 이 켜지면, 프로그래밍 모드에 들어갔다는 의미입니다.

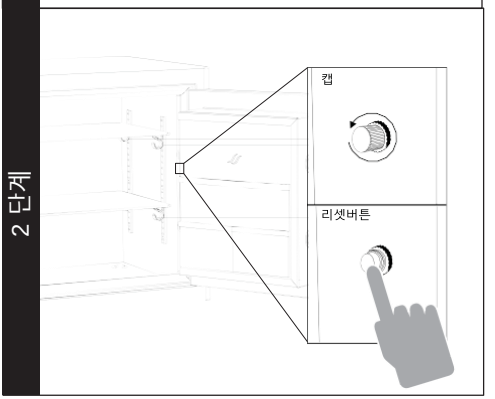

3. 노란색 불(왼쪽 LED)이 켜져 있는 동안, 새로운 보안 코드(3~8 자리)를 입력한 다음 [*] 를 누릅니다. 잠금 문자판에서 삐 소리가 두 번 울리면 보안 코드가 성공적으로 변경되었다는 의미입니다.

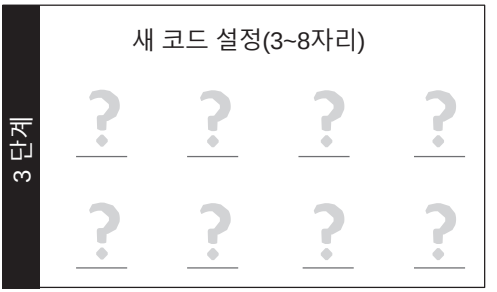

4. 잠금 문자판 보안 코드 설정 (계속)

4. 금고 문을 열어놓은 상태에서 방금 입력한 보안 코드를 확인합니다. 키패드를 "활성화"하려면 잠금 문자판을 살짝 터치합니다. 이제 새로운 코드(3~8자리)를 입력한 다음, (#)를 입력합니다. 코드를 입력하면 삐 소리가 두 번 울리고 녹색 불이 켜지면서 금고를 열 수 있게 됩니다.

참고: 새 보안 코드를 세 번 이상 확인한 후 금고 문을 닫으십시오. 코드가 제대로 저장되어 문을 열 수 있는지 확인하십시오. 코드가 틀리면 노란색 불빛(왼쪽)이 깜박이고 삐 소리가 납니다. 코드가 제대로 저장될 때까지 위의 단계들을 반복하십시오.

경고: 보안 코드를 세 번 이상 잘못 입력하면 30초 동안 자동 잠금 상태가 되고, 30초가 지난 후에 다시 코드를 입력할 수 있습니다. 세 번 더 실패하면 잠금 문자판이 5분 동안 잠금 상태가 됩니다. 잠금 상태일 동안에 배터리를 제거하지 마십시오. 배터리를 제거하면 잠금 시간이 초기화됩니다.

5. 금고 보안 코드를 잊어버린 경우

보안 코드를 잊어버린 경우, 백업 키로 금고를 열 수 있으며, '잠금 문자판 보안 코드 설정' 지침을 따라야 합니다.

백업 키를 분실했을 경우 아래의 고객 서비스로 연락하시기 바랍니다. 키를 받으려면 상품 구매 확인증이 필요합니다.

고객 서비스 연락:
이메일: cs@saproducts.com
전화: +1 (888) 792-4264
영업시간: 월 ~ 금 오전 9 시~오후 5 시(중부 표준시)
언어 선택: 영어, 스페인어, 프랑스어

6. 내부 조명

금고 문이 열리면 내부 조명이 30초 동안 켜집니다.
조명을 더 오래 켜야 하는 경우, 문 안쪽 패널에 있는 녹색 조명 활성화 버튼을 누르면 됩니다. 해당 버튼을 누를 때마다 내부 조명이 추가로 30초 간 켜집니다.

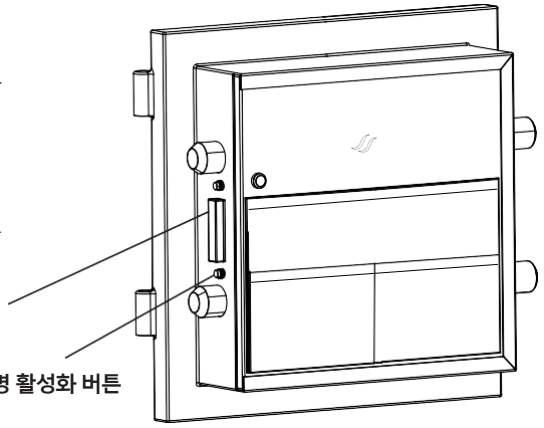

7. 배터리 부족 경고

빨간색과 초록색 = 배터리 부족

이 금고는 배터리가 부족할 경우 경고 기능을 갖추고 있습니다. 이 배터리 부족 경고는 잠금 해제가 성공적으로 완료된 직후에 시작됩니다.
터치패드에 빨간색 배터리 부족 LED와 녹색 잠금 해제 LED가 3초 간 켜집니다. 금고에 잠겨버리는 것을 방지하기 위해 금고 내의 배터리를 즉시 교체하는 것이 좋습니다.

8. 잠금 모드 / 조작 표시기 보호

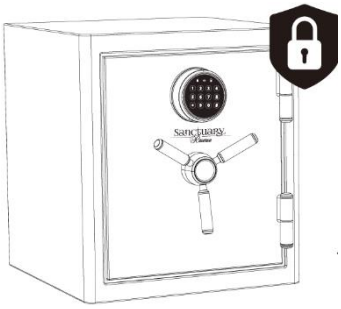

1. 보안 코드를 연속으로 세 번 잘못 입력하면 금고가 "기본 잠금" 모드로 설정되고 터치패드가 30초 동안 비활성화됩니다.

2. 보안 코드를 6회 연속으로 잘못 입력하면 "엄격 잠금" 모드로 전환됩니다. 터치패드가 5분 동안 비활성화됩니다.

참고: 잠금 모드에서는 노란색 잠금 LED가 10초마다 한 번씩 켜집니다. 잠금 모드가 종료되면 녹색 잠금 해제 LED가 한 번 깜박이고, 잠금 모드가 종료되었음을 알리는 삐 소리가 한 번 울립니다. 이제 터치패드를 사용할 수 있습니다.

3. 금고가 기본 또는 엄격 모드로 전환된 후 누군가 금고에 접근하려고 시도했지만 실패했음을 알리는 조작 표시기가 활성화됩니다. 이 조작 표시기는 다음 코드를 성공적으로 입력한 직후에 신호를 보냅니다. 노란색 잠금 LED가 세 번 깜박이고, 삐 소리가 3초 동안 길게 울립니다.

9. 무음 입력 모드

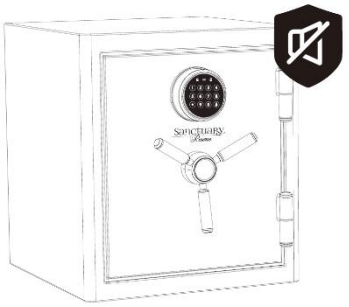

무음 입력 모드를 활성화하면 금고에서 더 이상 소리가 나지 않습니다.

터치패드를 탭하여 잠금 문자판을 '활성화'합니다. 무음 입력 모드를 켜려면 (*) 를 3초 동안 누릅니다. 노란색 LED가 두 번 깜박이며, 이제 무음 입력 모드에 들어갔음을 알립니다.

소리를 다시 켜려면 (*)를 3초 동안 누릅니다. 그러면 노란색 LED가 두 번 깜박이며, 더 이상 무음 입력 모드에 있지 않음을 알리는 삐 소리가 울립니다.

10. 금고를 적절한 곳에 배치하기

1. 도난 위험을 최소화하고 안정성을 극대화하려면 금고를 바닥이나 벽에 고정하는 것이 좋습니다.
2. SA Consumer Products는 금고를 벽장, 사무실, 지하실, 침실 또는 기타 눈에 띄지 않는 장소에 보관할 것을 권장합니다.
3. 금고는 항상 고립되고 건조한 장소에 두어야 합니다. 금고가 젖은 바닥에 닿지 않도록 하십시오. 금고를 콘크리트 바닥에 설치할 때는 방습제를 사용하는 것이 좋습니다. 이를 지키지 않거나 금고를 화학 물질 또는 기타 가혹한 환경에 노출할 경우, 보증이 무효화될 수 있습니다.

11. 금고를 건조하게 유지하기

금고와 콘크리트 바닥 사이에 방습제를 두어 습기, 곰팡이, 녹으로 인해 금고가 손상되지 않도록 하는 것이 좋습니다. 금고는 온도 조절이 가능한 장소(겨울에는 난방, 여름에는 냉방)에 설치하는 것이 좋습니다. 습도가 높거나 온도 변화가 잦은 장소(차고)에서는 습기로 인한 손상을 방지하기 위해 적절한 예방 조치를 취하는 것이 좋습니다. 내부 제습기 및/또는 건조제를 사용하여 내용물을 녹이나 곰팡이로부터 보호하는 것이 좋습니다. 내부 제습기는 측면 또는 후면 벽에 직접 닿지 않도록 해야 합니다.

12. 금고 고정하기

경고: 이 금고는 문이 열렸을 때 스스로를 지탱할 수 있도록 설계되었지만 넘어지지 않도록 주의해야 합니다. 한 명이 금고를 고정하는 동안, 다른 한 명은 금고가 기울어지거나 부상을 입히거나 금고와 주변 구조물에 손상을 입히지 않도록 금고를 잡고 고정시키는 것을 잊지 마십시오. 그렇게 하지 않으면 금고의 안전, 보안 및 보증이 손상될 수 있습니다.

콘크리트 표면에 금고를 볼트로 고정하는 데 필요한 도구 (미포함)

- 드릴/해머 드릴
- 드릴 비트 - 1.11cm (제공된 하드웨어를 사용하여 콘크리트에 설치할 때)
- 렌치 - 1.7cm 소켓
- 해머
- 보안경
- 장갑
- 기타 안전 장비 (필요 시)

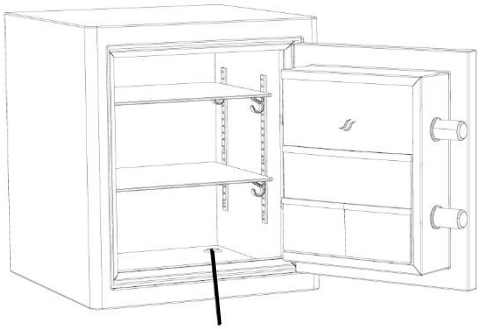

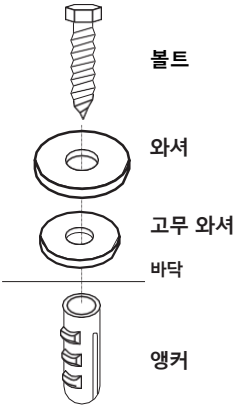

1. 제공된 하드웨어를 사용하거나 하드웨어 판매점에 문의하여 특정 장착면에 맞는 하드웨어를 고정합니다.
2. 금고 문을 열고 금고 바닥에 있는 네 개의 검은색 캡을 찾아 제거하면 공장에서 뚫은 볼트 구멍이 보입니다.
3.. 금고를 바닥에 고정하려면 먼저 바닥 표면에 파일럿 구멍을 뚫어야 합니다.
4. 제공된 하드웨어는 콘크리트 바닥 설치용으로, 해당 하드웨어 사용 시 해머 드릴과 1.1cm콘크리트 드릴 비트로 콘크리트 바닥에 구멍 4개를 뚫는 것이 좋습니다.
5. 플라스틱 앵커 플러그를 파일럿 구멍에 넣고 돌립니다. 플러그를 파일럿 구멍에 끝까지 넣으려면 망치를 사용해야 할 수도 있습니다.
6. 금고 바닥에 있는 공장에서 미리 뚫어놓은 바닥 볼트 구멍에 앵커 볼트 4개를 넣고 서서히 조여 고정합니다.
   - 금속 와셔는 고무 와셔 위에 있어야 합니다. 볼트를 조여 금고와 금속 와셔 사이에 있는 고무 와셔를 압축하십시오. 그렇게 하지 않으면 홍수가 발생했을 때 물이 금고 안으로 들어올 수 있습니다.
7. 검은색 캡 4 개를 원래 있던 위치에 다시 씌웁니다.

13. 선반 클립에 범퍼 부착하기

참고: 고무 범퍼를 선반 클립에 부착하기 전에 표면이 깨끗하고 건조한지 확인하십시오.

1. 접착면에 붙어있는 접착 방지용 종이를 떼어냅니다.
   접착 부분을 만지지 말고 선반 클립의 표면에 붙입니다.

2. 잘 붙였다면 고무 범퍼를 5초 동안 눌러 단단히 고정합니다.

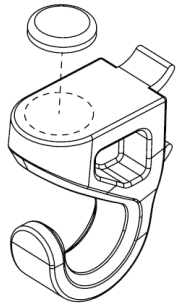

14. 금고에 물건 채우기

1. 화재 피해를 최대한 방지하기 위해 문서 및 열에 민감한 물품은 금고 하단에 보관하십시오.
2. 탄약은 귀중품과 따로 보관하십시오.
3. 금고 문을 닫았을 때 문에 압력을 가하는 물건을 금고에 넣지 마십시오.
4. 안전을 위해 무거운 물건은 금고 하단에 보관하거나 선반 양쪽 끝에 보관하십시오.

15. 경첩 및 내부 잠금 장치

경첩 및 내부 잠금 장치는 영구적으로 윤활 처리되어 있어 유지 보수가 필요하지 않습니다. 금고의 도어 패널을 열면 보증이 무효화될 수 있습니다. 열기 전에 항상 고객 서비스 전문가와 상담하십시오.

참고: 방수 처리된 금고는 본질적으로 기존의 금고보다 금고 문을 닫는 데 더 많은 힘이 필요합니다. 금고가 방수 상태를 유지하려면 워터 씰(water seal)을 압축해야 합니다. 씰이 굳고 시간이 지남에 따라 금고를 닫는 것이 더 쉬워집니다.

평생 보증

SA Consumer Products, Inc. 는 최초 소유자에게 화재, 무단 침입, 무단 공격 또는 자연 홍수로 인해 손상된 안전 금고를 자체 재량에 따라 평생 수리 또는 교체해 드립니다.

SA Consumer Products, Inc. 는 부품, 페인트 또는 잠금 장치에 결함이 있는 안전 금고에 대해 자체 재량에 따라 최초 소유자에게 평생 수리 또는 교체해 드립니다.

SA Consumer Products, Inc. 가 교체용 금고를 보내야 한다고 판단하는 경우, 최초 소유자에게 교체용 금고를 배송하는 데 드는 운송 비용을 부담합니다.

이 평생 보증은 금고에 한정되며 금고 내용물과 관련된 손실은 명시적으로 제외됩니다.

SA Consumer Products, Inc. 는 경찰 보고서 및/또는 주택 소유자의 보험 적용 범위 진술서와 같은 귀하의 불행에 대한 완전한 증거를 받을 권리가 있습니다.

청구 시 등록 증명서와 판매 영수증 사본이 제출되어야 합니다.
www.saproducts.com 에서 금고를 등록하십시오.

평생 보증은 금고의 최초 소유자에게만 적용됩니다.

SA Consumer Products, Inc. 는 귀하가 새로 구매한 안전 금고 사용 설명서에 명시된 지침에 따라 안전 금고를 사용할 때만 책임과 의무를 집니다.

사용자 설명서의 지침에 따라 금고를 바닥에 제대로 고정하지 않으면 금고 보증이 무효화됩니다.

SA Consumer Products, Inc.는 수리를 위해 특정 지침을 따르도록 요구합니다. 금고는 가능한 경우 (부품과 인건비 포함) 집에서 수리됩니다. 그러나 SA Consumer Products, Inc. 의 자체 판단 하에 공장 교체가 필요한 경우, 교체품은 선불로 운송되어 도로변에서 인도됩니다.

이 보증은 포괄적이며, 명시적이든 묵시적이든 그 어떤 다른 보증도 대신합니다. 특히, 특정 목적에 대한 상품성 및 적합성에 대한 보증이 제외됩니다. 이 보증은 금고 자체 및/또는 그 가치에 국한되며, 금고 내의 내용물을 포함하되 이에 국한되지 않는 모든 종류의 결과적 손해는 포함하지 않습니다.

Distributed by:
배포처:
Costco Wholesale Corporation
P.O. Box 34535
Seattle, WA 98124-1535
USA
1-800-774-2678
www.costco.com

MADE IN CHINA
제조국: 중국